




5. Childproof Lid

Using the screw provided, fasten the lid via the hole beneath the rim of the water butt.



6. Tank-to-Tank Connection

If you wish, you may connect two Barrique Water Butts together using the 3P Tank to Tank connection Kit (250 mm), Art-no: 9000326

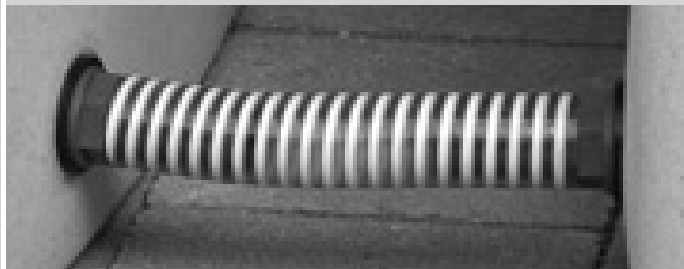


The Barrique Water Butt is delivered with a full kit including a brass tap, wall bracket, and screws. To fill the Barrique, we recommend using the optional 3P Filter Collector Universal.

Where the water butt cannot be located within 30 cm of the down pipe, longer Universal Long Link Kits are available online (Art. No. 9000123U, U2, to U5).

If in any doubt during installation, please consult a professional tradesman.

3P Burgundy 500 L Instruction Sheet

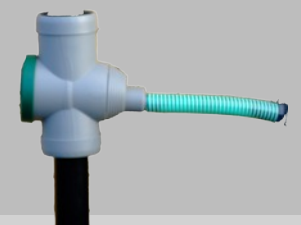

3P Burgundy

Art. No. 9000710K



3P Burgundy

Art. No. 9000710K



1. Setting up

Site the rain tank on a firm, level surface adjacent to a downpipe.

Refer to your Filter Collector Instructions or other rain diverter instructions.



3. Connecting the Tap

Screw the 3/4" brass tap provided in the kit into the 3/4" BSP connection thread. If necessary, use PTFE tape when installing the tap to create a more watertight seal and to ensure the tap sits in the correct position.

4. Winter Care Precautions

To prevent any damage from being caused, the Burgundy must be drained completely and disconnected from the rainwater inlet during freezing weather conditions.

2. Fitting an (optional) 3P Filter Collector Universal Link Kit

Marking Out

Measure down 125 mm from the lip of the water butt. This position is ideal for all connections of 32 mm (1 1/4") or less.

Hole Cutter Selection - 32 mm


To fill the water butt with the recommended 3P Filter Collector Universal. Select the 32 mm flat bit provided.

Drilling

Offer the drill to the marked point, proceed to drill the hole at 32 mm. (If you are not fitting a 3P Filter Collector Universal then double-check that you are drilling a correctly sized hole for the connection set that you are using.)

Attaching a Back-Nut & Hose Tail

A back nut and rubber seal may be fitted. Hold the back nut and rubber seal on the inside of the hole and screw on the hose tail.

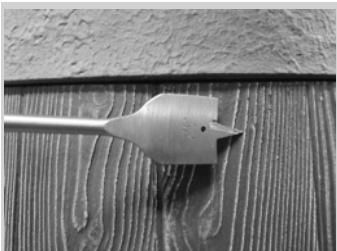

Filter Collector Universal: Art. No: 2000840U

