


## 1010783 > FMT 12V DISPENSING KIT FTS – ASSEMBLY INSTRUCTION

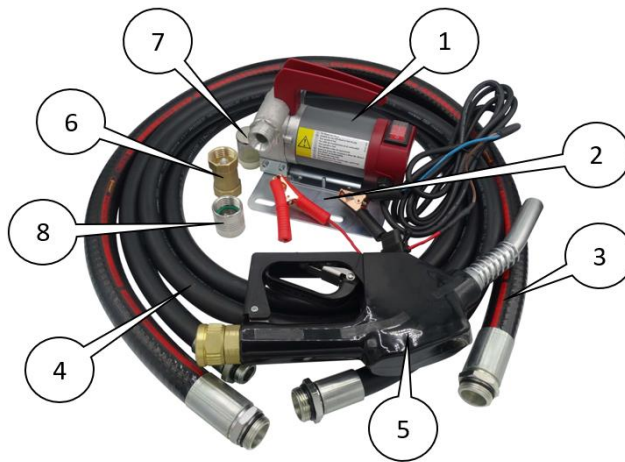

1. Unpack parts and check if all the components are present according to the packing list.
2. Find **8 (1" EQUAL SOCKET)** and install on the **RHS (INLET)** pump port – use Loctite 577 or PTFE tape or similar thread sealant to secure the connection.



3. Find **3 (1" SUCTION LINE)** and screw it to the installed 1" socket – use Loctite 577 or PTFE tape or similar thread sealant to secure the connection.
4. Find **6 (1" NON-RETURN VALVE)** and screw to the end of the suction line - use Loctite 577 or PTFE tape or similar thread sealant to secure the connection.  
NOTE: Make sure that the arrow on non-return valve is pointing correct direction i.e. to the suction line.
5. Locate **7 (ROUND MESH FILTER)** and fit it to the non-return valve
6. Remove 1" male end on the **LHS** pump port – use shifting spanner – this will result in  $\frac{3}{4}$ " female connection on the **OUTLET** side of the pump
7. Locate **4 (4m DELIVERY HOSE)** and screw  $\frac{3}{4}$ " end of the hose into the **OUTLET (LHS)** port of the pump. Use PTFE, Loctite 577 or similar to secure connection.
8. Locate the **5 (AUTOMATIC NOZZLE)** and fit it to the 1" end of the Delivery Hose. Use PTFE, Loctite 577 or similar to secure connection