



SPECIFICATIONS

Tank Depth measurement:	Minimum depth: 0.5m. Maximum depth: 3m.
Display:	Bar graph level display, 10% tank height per bar. Early warning indication (flashing tank fill) at a predetermined height above tank bottom (see section 11). Tank empty warning flashes red LED at a predetermined height from tank bottom. (see section 11) Meets EN60335.
Max communication distance:	200m in normal "line of sight" conditions. The effective range of this product can be influenced by external sources that may reduce the range of the transmitter or sensitivity of the receiver.
Power supply:	Receiver: 150-250V, 50-60HZ. Transmitter: 3-voltlithium cell.
Battery life:	3 years (estimated life).
Wireless com:	433 mHz. FM transmission. EN 300-220, FCC part 15.
Dimensions:	Receiver: 50 x 55 x 35mm (not including aerial). Transmitter: 70x93mm.
Max and min operating temp. (transmitter):	Operating temp. Range -10° to +60 ° C. Operating humidity: 0-100%. Sealed airtight unit made from PP3317 UV stabilized.
Hole size for tank fitting:	32mm 2" BSP external thread adaptor

Declaration: this apparatus is designed to: Not give rise to physical injury or other harm due to contact. Not to produce excessive surface temperatures, infrared, electromagnetic, ionising radiation. To have no non-electrical dangers. When used in accordance with these user and installation instructions.

Warning: If the equipment is likely to come in to contact with aggressive substances, then it is the responsibility of the user to take suitable precautions that prevent it from being adversely affected, thus ensuring that the type of protection is not compromised. Aggressive substances; - e.g. liquids or gases that may attack metals, or solvents that may affect polymeric materials.

In order to minimize the risks of electric shock,

-  The receiver is for indoor use only, never use outdoors.
-  The receiver is a sealed unit; do not attempt to open it.

Safety Information

Do not replace in a potentially explosive atmosphere
Periodically check that the unit is intact and securely fastened to the tank.
Check with the manufacturer on the chemical compatibility prior to use.
Do not attempt to repair this equipment. It must be returned to the manufacturer for repair.
Warning! Electrostatic hazard! Clean only with damp cloth.
Use only VARTA CR2430 batteries.
Not suitable for pressurised containers. Use on tanks vented to atmosphere.

Warranty: 1 year.



ecotanks

deltona house
six cross roads business park
waterford

t: 051 351325
e: info@tanks.ie

tanks.ie



INSTALLATION INSTRUCTIONS





OIL ALARM

In the event of the oil level in the tank dropping at a rate that is not common for a domestic oil tank the receiver will emit a siren type sound that indicates a theft/leak is occurring. The siren will continue to go off even after the level has stabilized and can only be reset by turning on and off the power to the receiver.

This product is to be used only on domestic oil tanks within the parameters outlined in the specifications. Any use of the product on applications that lie outside a domestic environment is done so at users own risk.

READ FULLY BEFORE INSTALLATION AND USE

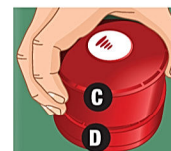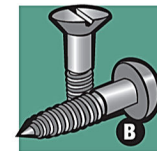


**A RECEIVER B SCREWS C WATCHMAN ALARM TRANSMITTER
D WATCHMAN ALARM BASE E WEATHER SEAL**

1 CHECK LEVEL, DISTANCE AND HEIGHT

Suitable for use in tanks for the storage of diesel fuel, kerosene, and gas oil types A2, C1, C2 and D as defined by BS 2869. Check with the manufacturer and/or supplier before using with any other fluids.

Ensure before you start your install that the tank the WatchmanAlarm is to be fitted to is:

1. Level (See Picture 1)
2. Within a 200-metre range of the line of sight of receiver position.
3. A maximum height of 3 meters

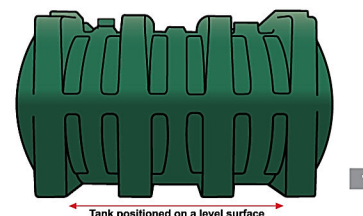

2 TANK PREPARATION

Please note- it is important to keep all items dry during installation.


A) PRE-DRILLED TANKS.

There may already be a 32mm pre-drilled opening in the tank top and possibly a tube fitted. If so, remove the cover by undoing the two screws holding it in place, and dispose of the tube in accordance with local government guidelines.

NB – Ensure the hole is a minimum DIAMETER 30mm.

B) UN-DRILLED TANKS.


Where drilling is required to fit the transmitter, choose a flat level point that is at the same level and no higher than any opening at the top of the tank (filling point etc.). (See Picture 2)

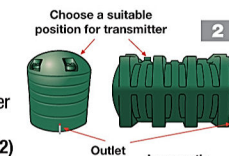


The Transmitter can't sit at an angle as this gives an incorrect level reading on the receiver. Take care not to choose an area on which water could gather i.e. a dent/depression or a position directly above any restricted area inside the tank. (See Picture 3)



NB: For Windowed Tanks ensure that the WatchmanAlarm is not positioned above the area of the WINDOW. If the WatchmanAlarm is positioned over the WINDOWED area it transmits faulty readings to the receiver. (See Picture 4)

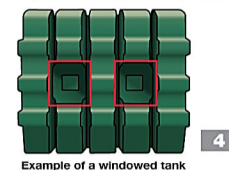

Drill a hole in the place that you have selected on the tank's top surface using a 32mm hole-saw. (shown in Picture 5)

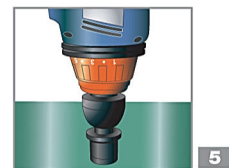


3 FITTING TRANSMITTER BASE

For tanks with pre-drilled holes

- Remove cap from the hole (Picture 6) and insert transmitter base, ensuring the weather seal is securely in place (Picture 7 & 8).
- Tighten the WatchmanAlarm base (Part D) on to the tank with 2 stainless steel self-tapping, countersinks supplied (Part B). Do not over tighten!



- 4 DEFINE THE TANK HEIGHT**
- Accurately measure the height of your tank. Maximum tank height 3 Metres from the base of your tank to the position of the WatchmanAlarm (which should be the same as the fill point).
 - This measurement is from the base of your tank to the WatchmanAlarm (which should be the same as the fill point). (Seen in Picture 9)

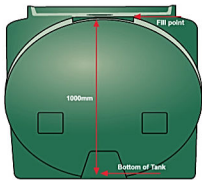

9


5 SETTING THE SWITCHES ON THE RECEIVER

Using the tank height chart (see section 11), read across to the relevant multi switch settings. The multi switches are located in a recess at the back of the receiver above the pins.

Using a screwdriver or tip of a ballpoint pen, flip the relevant switch (e.g.) upwards (= ON). As an example, if the tank is 100 cm high, set switches 5 & 7 ON (Up). (See Picture 10)

NOTE: Dip switch one if set in the on (up) position will cause the unit to bleep in the event of a low level reading. To deactivate this set the dip switch to an off (down) position. Dip 1 position will not affect the alarm function.

The receiver unit may be tested by setting all the dip switches to an on (up) position and plugging in to a power outlet. When all 8 dip switches are set it in the on position (up) the audible alarm will go off and can only be stopped by un-plugging or turning off the power to the outlet. This feature is only designed to demonstrate the alarm functionality and the device will not operate correctly if the dip switches are left in this position.

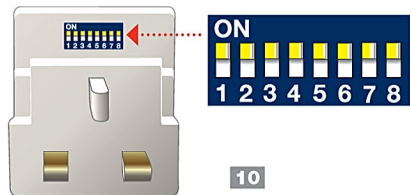

10

6 MATCHING RECEIVER AND TRANSMITTER

You should match the receiver (Part A) with the transmitter (Part C) so that the system code is unique to your tank. You only need to do this once. Plug receiver into a suitable and convenient electrical socket and switch on.

The display screen (Picture 11) on the front of the receiver will show a flashing top bar as shown in diagram. This indicates that the receiver is waiting for the unique code. The bar will continue to flash for 2 minutes during which time you can match the transmitter to the receiver.



11

Hold the transmitter against the receiver right hand side, as shown (Picture 12), so that the black dot on the transmitter is touching the black dot on the receiver (important!) for about 20 seconds to allow unique code to be transferred. Bars will increase up the display screen. When all 10 bars are shown they will flash to indicate that the unique code is transferred.



12

- The receiver will wait for a code for 2 minutes when plugged in.
- If you should want to change the height, just unplug the receiver, change the dip switches and plug it back in.
- If you are installing more than one WatchmanAlarm unit please wait 9 minutes between each matching.
- In the event of a power failure or if the receiver is switched off or moved to a new socket: When power returns again or unit is switched on, the receiver display screen will show the top bar flashing. There is no need to repeat the matching instruction. The top bar will continue to flash for 2 minutes, after which time the last valid signal is displayed. It may take up to two hours for the next transmission from the transmitter.

7 FITTING THE TRANSMITTER TO THE BASE

Screw the transmitter (Part C) into the base (Part D). Ensure the transmitter is vertical on top of the tank and level.


Ensure that the WatchmanAlarm unit is screwed correctly into the base and that the threads have not crossed, to give a secure seal. (See Picture 13)



13

8 CHECK THE LEVEL OF OIL IN THE TANK

The bar graph represents the level of oil in your tank.

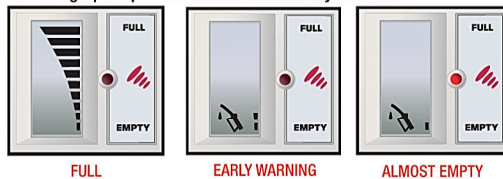

Note: It can take up to 2 hours for the first accurate reading from the WatchmanAlarm to be displayed.

9 TROUBLESHOOTING

CHANGING BATTERY

Though the lithium battery will have a very long service life, it will eventually become exhausted and will need replacing.

Batteries can be purchased from a good photographic shop or chemist. The battery model is: VARTA CR2430.

- Remove transmitter from tank
- Take transmitter indoors, into a clean dry environment
- Using a cross point screwdriver, undo the four screws, located under the main body of transmitter
- Remove the top cover
- Flip out battery
- Clip in new battery
- Re-fit cover
- Evenly tighten all four screws - do not over tighten
- Replace transmitter on the tank

If the receiver detects a low battery the following warning message is displayed on the LCD. The level of oil in the tank plus a constantly flashing warning triangle. (Shown in picture 14)



LOW BATTERY

14

If the receiver detects a transmission not heard for a long time the following message is displayed on the LCD. Constantly flashing warning triangle. This starts approximately 12 hours from the last received good signal. (Shown in picture 15)



TRANSMISSION NOT HEARD

15

False Alarm:

This may be caused by the incorrect tank height being entered into the unit. Please refer to section 5 and ensure that you have set the Dip switches to the correct height of the tank.

Alternatively the tank on which the unit is being used may be unsuitable. The oil in the tank may be being used too fast. The product is designed to monitor oil tanks that provide an oil feed to standard domestic oil burners under normal domestic conditions.



CONNECTION FAULT

16

10 GUARANTEE

The WatchmanAlarm has a warranty period of 1 year. For each product accepted by Kingspan Environmental as warrantable, Kingspan Environmental will rework or replace the product and return to the customer at Kingspan Environmental expense. The warranty becomes invalid if the sealed unit is opened (Part C).

- Used outside the functional and environmental conditions for which they were designed.
- Physically abused, incorrectly handled/ installed or damaged in transit.
- Despatched from Kingspan Environmental more than 1 year previously.
- Returned to Kingspan Environmental in a form other than in which they were originally supplied.
- Subjects to "Act of God", e.g.: lightning strike, flood or any other catastrophic event beyond Kingspan Environmentals control.

Any Sensor product deemed damaged by the customer shall be returned to Kingspan Environmentals facility at the customer's expense.

The purchase invoice and a description issue should be joined with the faulty product. The product should be returned at your shop or directly at the following address:

11 WATCHMANALARM RECEIVER MULTI SWITCH SETTING CHART

Measure the vertical height of the tank from the transmitter position on top of the tank to the bottom of the tank. Read to the nearest measurement on the chart. Ignore dip-switches 1 & 2. Unless see NOTE under point 5.

Tank Height (cms)	DIP 3	DIP4	DIP5	DIP6	DIP7	DIP8
50						
55						ON
60					ON	ON
65					ON	ON
70				ON		
75				ON		ON
80				ON	ON	
85				ON	ON	ON
90			ON			
95			ON			ON
100			ON		ON	
105			ON		ON	ON
110			ON	ON		
115			ON	ON		ON
120			ON	ON	ON	
125			ON	ON	ON	ON
130		ON				
135		ON				ON
140		ON			ON	
145		ON			ON	ON
150		ON		ON		
155		ON		ON		ON
160		ON		ON	ON	
165		ON		ON	ON	ON
170	ON		ON			
175	ON		ON			ON
180	ON		ON		ON	
185	ON		ON		ON	ON
190	ON		ON	ON		
195	ON		ON	ON		ON
200	ON		ON	ON	ON	
205	ON		ON	ON	ON	ON
210	ON					
215	ON					ON
220	ON				ON	
225	ON				ON	ON
230	ON			ON		
235	ON			ON		ON
240	ON			ON	ON	
245	ON			ON	ON	ON
250	ON		ON			
255	ON		ON			ON
260	ON		ON		ON	
265	ON		ON		ON	ON
270	ON		ON	ON		
275	ON		ON	ON		ON
280	ON		ON	ON	ON	
285	ON		ON	ON	ON	ON
290	ON					
295	ON	ON				
300	ON	ON			ON	